

# IP Speaker

IS-660

User manual



**PORTech**  
Your CTI Partner

# 【Content】

<b>1.Introduction</b> .....	<b>1</b>
<b>2.Parts list</b> .....	<b>1</b>
<b>3.Panel description</b> .....	<b>2</b>
<b>4.Web Page Setting</b> .....	<b>3</b>
<b>5 Network</b> .....	<b>5</b>
5.1 Network Status.....	5
5.2 WAN Setting.....	5
<b>6. SIP Setting</b> .....	<b>6</b>
6.1 Service Domain .....	6
6.2 Port Setting .....	7
6.3 Codec Setting .....	7
6.4 Audio Setting.....	8
6.5 Other Setting.....	9
<b>7.STUN Setting</b> .....	<b>10</b>
<b>8.Update</b> .....	<b>11</b>
8.1 New Firmware.....	11
8.2 Default Setting .....	13
<b>9.System Authority</b> .....	<b>14</b>
<b>10.Save Change</b> .....	<b>14</b>
<b>11.Reboot</b> .....	<b>15</b>

# 1.Introduction

IS-660 IP POE Ceiling Speaker provide a user-friendly control and simple voice broadcasting. The product is designed to provide easy use for any office, department store, factory, school to be able to quickly broadcast announcements to their any assigned office or branch or classes (or a group of office or branch or classes) .

## 2.Parts list:


2.1. IP Speaker(IS-660) main body : DIM: 19.8x16.6x11CM



2.2.User manual

3.1 LAN port : RJ-45 network port(PoE) ; connected to PoE Injector through network cable.P+D/OUT port conducts network connection and power supply

PoE Injector and IS Serial IP Speaker Diagram

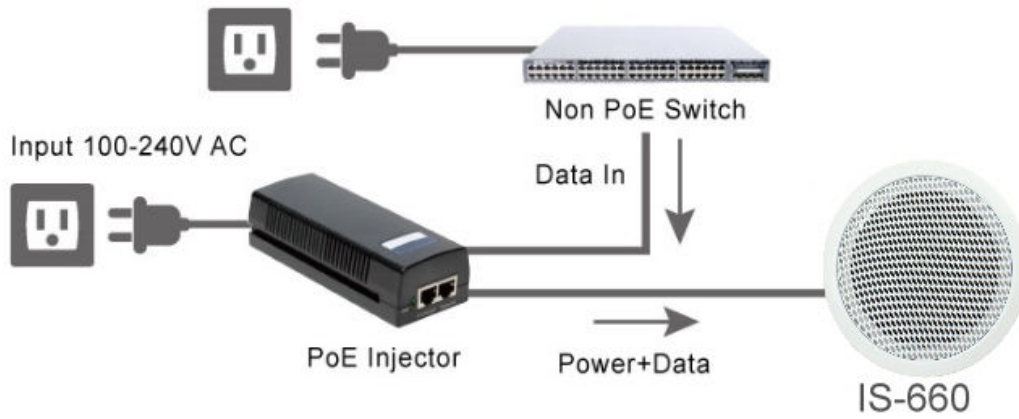

### 3.2 Power :

1. light turn off : no power
2. light turn on : standby

### 3.3 Status :


1. light turn off : standby
2. light turn on : call in status
3. light twinkle : user is speaking

3.4 IP Reset Button : please press the button in 7-8 seconds till the status led flash blink to restore the factory default

## 3. Web Page Setting

Step 1: Browse the IP address <http://192.168.0.100> from Internet Explorer


Step 2: Please enter the username and password for authentication. (default username: voip · Password: 1234). The page follows when the username and password are correct

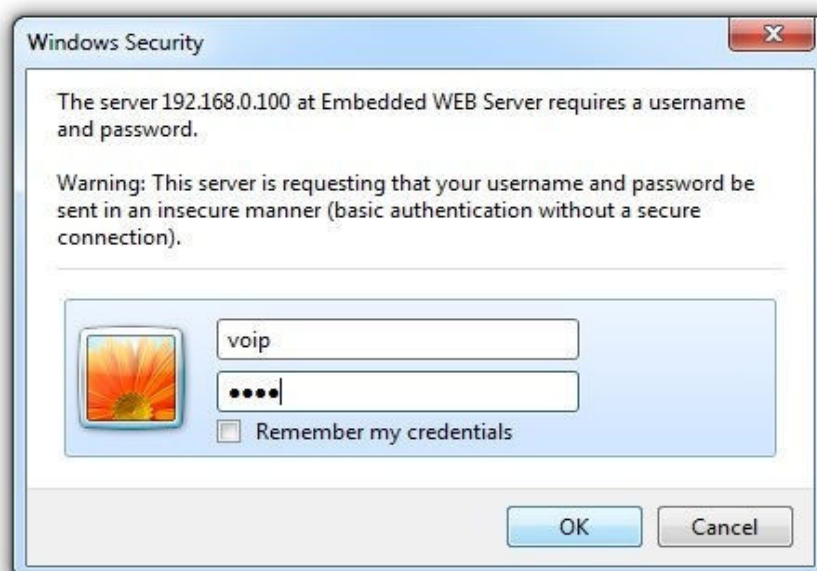

Step 3: When you login the web page,you can see current System Information like Model Name,Firmware Version,Codec, Version ....etc in this page.

You also can see the function lists in the left side

Include Network ,SIP Setting,STUN Settings, Update,System Authority,Save Change , Reboot .

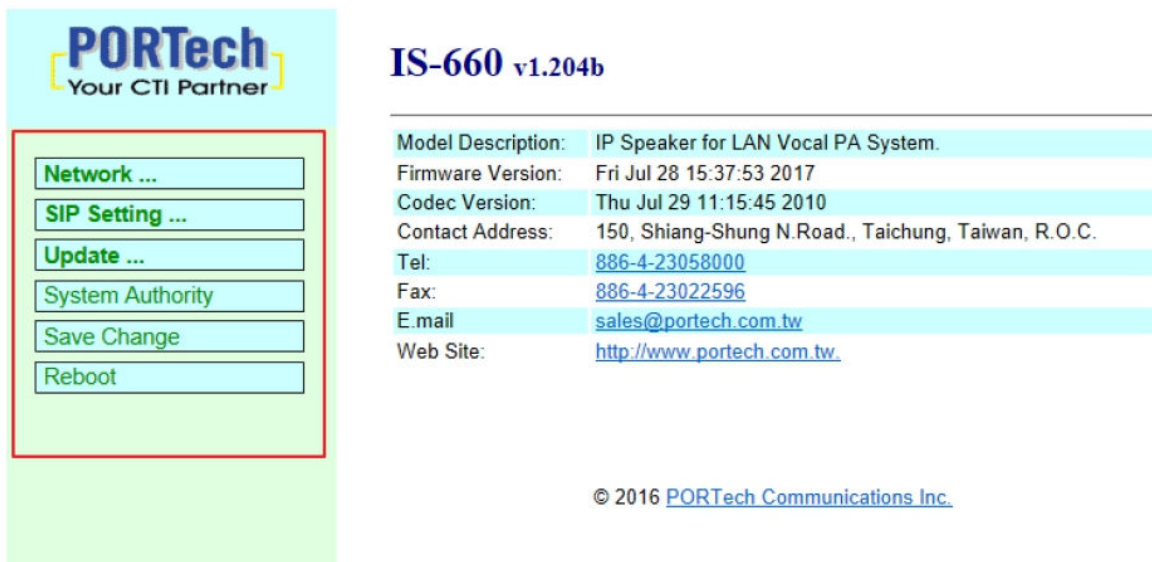

**PORTech**  
Your CTI Partner

**IS-660 v1.204b**

Model Description:	IP Speaker for LAN Vocal PA System.
Firmware Version:	Fri Jul 28 15:37:53 2017
Codec Version:	Thu Jul 29 11:15:45 2010
Contact Address:	150, Shiang-Shung N.Road., Taichung, Taiwan, R.O.C.
Tel:	<a href="tel:886-4-23058000">886-4-23058000</a>
Fax:	<a href="tel:886-4-23022596">886-4-23022596</a>
E.mail	<a href="mailto:sales@portech.com.tw">sales@portech.com.tw</a>
Web Site:	<a href="http://www.portech.com.tw">http://www.portech.com.tw</a>

© 2016 [PORTech Communications Inc.](#)

- 3.1.Network : provide Status,WAN Setting
- 4.2.SIP Settings : Provide Service Domain  
Port Setting (SIP and RTP port setting),Code Setting,Audio Setting,Other Setting
- 4.3. STUN Setting : provide STUN Setting to penetrate the Firewall ◦
- 4.4. Update : provide New Firmware (firmware upgrade),Default Settings (restpre default setting).
- 4.5. SystemAuthority : provide user to change login name and password.
- 4.6.Save Change :Save the changes you have done
- 4.7.Reboot :Restart the system. ◦

# 5 Network

## 5.1 Network Status

Network Status: you can check the current Network Setting in this page

### Net Status

Master	WAN Interface	LAN Interface
Type	Fixed IP Client	-
IP	192.168.0.100	-
Mask	255.255.255.0	-
Gateway	192.168.0.254	-
MAC	00037E014E67	-

## 5.2 WAN Setting

**PORTech**  
Your CTI Partner

**WAN Setting**

IP Type:  Fixed IP  DHCP Client  PPPoE

Master IP: 192.168.0.100

Mask: 255.255.255.0

Gateway: 192.168.0.254

DNS Server1: 168.95.192.1

DNS Server2: 168.95.1.1

MAC: 00037e014e67

**PPPoE Setting**

User Name:

Password:

Submit Reset

- (1) The TCP/IP Configuration item is to setup the WAN port's network environment. You may refer to your current network environment to configure the system properly.
- (2) The PPPoE Configuration item is to setup the PPPoE Username and Password. If you have the PPPoE account from your Service Provider, please input the Username and the Password correctly.
- (3) When you finished the setting, please click the Submit button.

# 6. SIP Setting

## 6.1 Service Domain

In Service Domain Function you need to input the account and the related informations in this page, please refer to your ISP Provider. You can register three SIP accounts.


field	explain
Realm 1 (Default)	
Active	Default:Off , on: active this account
Display Name	you can input the name you want to display
User Name	you need to input the User Name get from your ISP.
Register Name	you need to input the Register Name get from your ISP.
Register Password	you need to input the Register Password get from ISP.
Domain Server	you need to input the Domain Server get from your ISP.
Proxy Server	you need to input the Proxy Server get from your ISP
Outbound Proxy	you need to input the Outbound Proxy get from your ISP. If your ISP does not provide the information,then you can skip this item.
Status	You can see the Register Status. Not Register(register fail) , Register(register successful) .

When you finished the setting,please click the Submit button. Remember to click “Save Charge”



## 6.2 Port Setting

You can setup the SIP and RTP port number in this page. Each ISP provider will have different SIP/RTP port setting, please refer to the ISP to setup the port number correctly. When you finished the setting, please click the Submit button and “Save Charge”

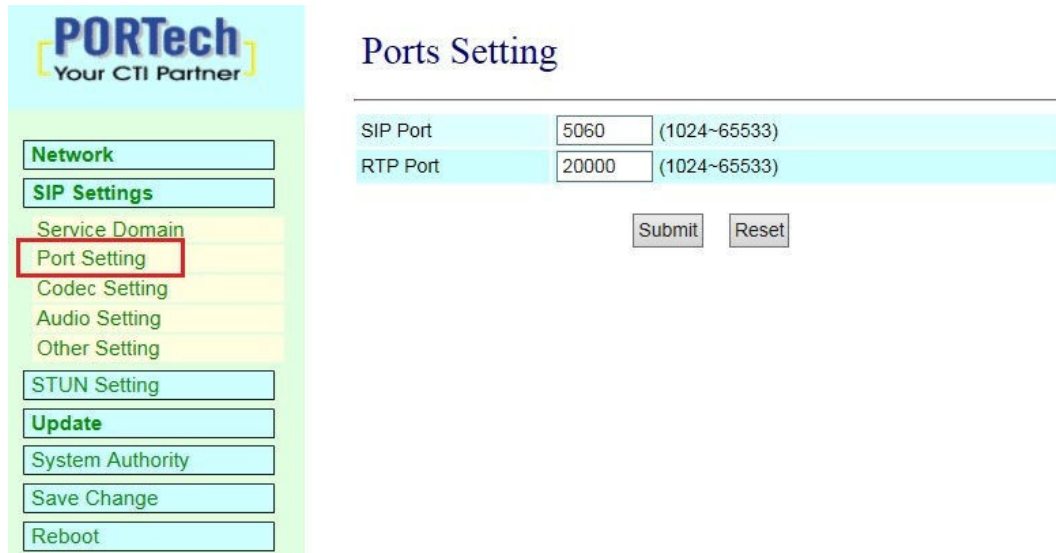


The screenshot shows the PORTech web interface. On the left is a navigation menu with the following items: Network, SIP Settings, Service Domain, Port Setting (highlighted with a red box), Codec Setting, Audio Setting, Other Setting, STUN Setting, Update, System Authority, Save Change, and Reboot. The main content area is titled "Ports Setting" and contains the following fields:

SIP Port	<input type="text" value="5060"/>	(1024~65533)
RTP Port	<input type="text" value="20000"/>	(1024~65533)

Below the fields are two buttons: "Submit" and "Reset".

## 6.3 Codec Setting

You can setup the Codec priority, RTP packet length in this page. You need to follow the ISP suggestion to setup these items. When you finished the setting, please click the Submit button and “Save Charge”.

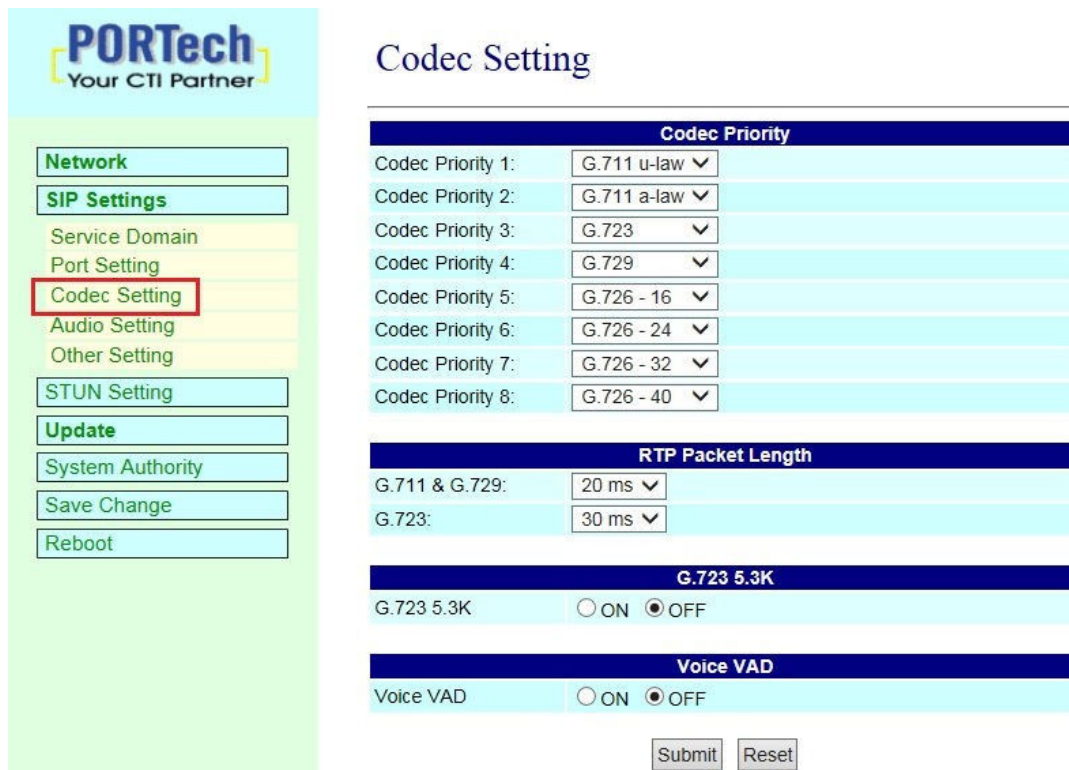

The screenshot shows the PORTech web interface. On the left is a navigation menu with the following items: Network, SIP Settings, Service Domain, Port Setting, Codec Setting (highlighted with a red box), Audio Setting, Other Setting, STUN Setting, Update, System Authority, Save Change, and Reboot. The main content area is titled "Codec Setting" and contains the following sections:

### Codec Priority

Codec Priority 1:	<input type="text" value="G.711 u-law"/>
Codec Priority 2:	<input type="text" value="G.711 a-law"/>
Codec Priority 3:	<input type="text" value="G.723"/>
Codec Priority 4:	<input type="text" value="G.729"/>
Codec Priority 5:	<input type="text" value="G.726 - 16"/>
Codec Priority 6:	<input type="text" value="G.726 - 24"/>
Codec Priority 7:	<input type="text" value="G.726 - 32"/>
Codec Priority 8:	<input type="text" value="G.726 - 40"/>

### RTP Packet Length

G.711 & G.729:	<input type="text" value="20 ms"/>
G.723:	<input type="text" value="30 ms"/>

### G.723 5.3K

G.723 5.3K  ON  OFF

### Voice VAD

Voice VAD  ON  OFF

Below the sections are two buttons: "Submit" and "Reset".


## 6.4 Audio Setting

Set speaker volume and voice detect function

Field	description
Speaker Volume	Default:50,maximum: 64 , minimum: 0.
Detection Sensitivity	Default:32,maximum: 32 , minimum: 0
Report to Host	Default:OFF;ON:send Voice detection packet to Host Server ,OFF:don't send Voice detection packet to Host Server.
Host Server	setHost Server IP Address.
Rx Host IP only	Default:OFF;ON:only accept receiving Host Server's packet , OFF:accept receiving other ip address's packet except for Host Server
RTP Timeout	Default:10 seconds; set xx seconds that don't receive RTP Packet from Host Server, device will be auto back to stand-by status

When you finished the setting, please click the Submit button and “Save Charge”.

## 6.5 Other Setting

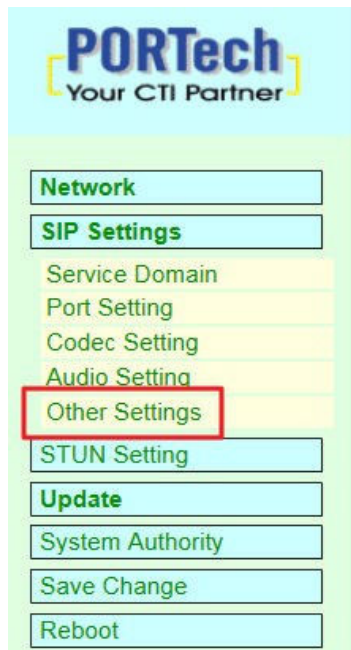

### Other Setting


SIP Expire Time:  (30~86400 sec)

SIP Expire Time: Default:60; set register's time interval ;range:30~86400 sec  
When you finished the setting, please click the Submit button and "Save Charge".

[CutLine]: when click this button,device will break off current broadcast procedure and back to stand-by status.

# 7.STUN Setting

you can setup the STUN Enable/Disable and STUN Server IP address in this page. This function can help your VoIP device working properly behind NAT. To change these settings please following your ISP information. When you finished the setting, please click the Submit button.

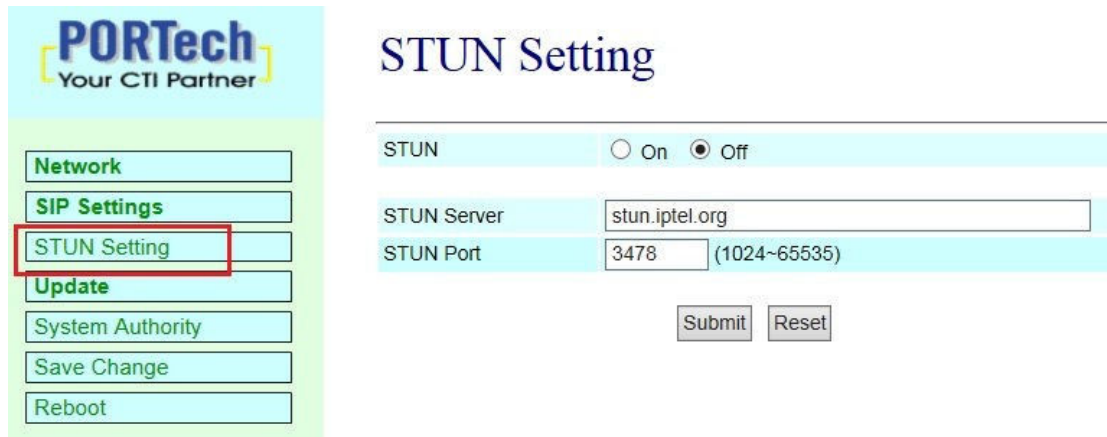

The screenshot shows a web interface for configuring STUN settings. On the left is a navigation menu with the following items: Network, SIP Settings, STUN Setting (highlighted with a red box), Update, System Authority, Save Change, and Reboot. The main content area is titled "STUN Setting" and contains the following configuration fields:

- STUN**: Radio buttons for On and Off, with "Off" selected.
- STUN Server**: A text input field containing "stun.iptel.org".
- STUN Port**: A text input field containing "3478" and a label "(1024~65535)".

At the bottom right of the configuration area are two buttons: "Submit" and "Reset".

# 8.Update

In Update you can update the system’s firmware to the new one or execute the factory reset to let the system back to default setting.

## 8.1 New Firmware



Field	Description
Code Type	Default:Risc (.gz). Provide Risc (system firmware.gz) and DSP (DSP firmware.ds).
File Location	Click the “Browse” button in the right side of the File Location or you can type the correct path and the filename in File Location blank.


Setep 1: choose Updte@New Firmware , choose Code Type: Risc and click the “Browse” button in the right side of the File Location or you can type the correct path and the filename in File Location blank.

## Update Firmware

Ver = v1.130, GZ = r4IPA,x1, PCB = IS640.



Step 2: choose [gz] file ,then click [open].

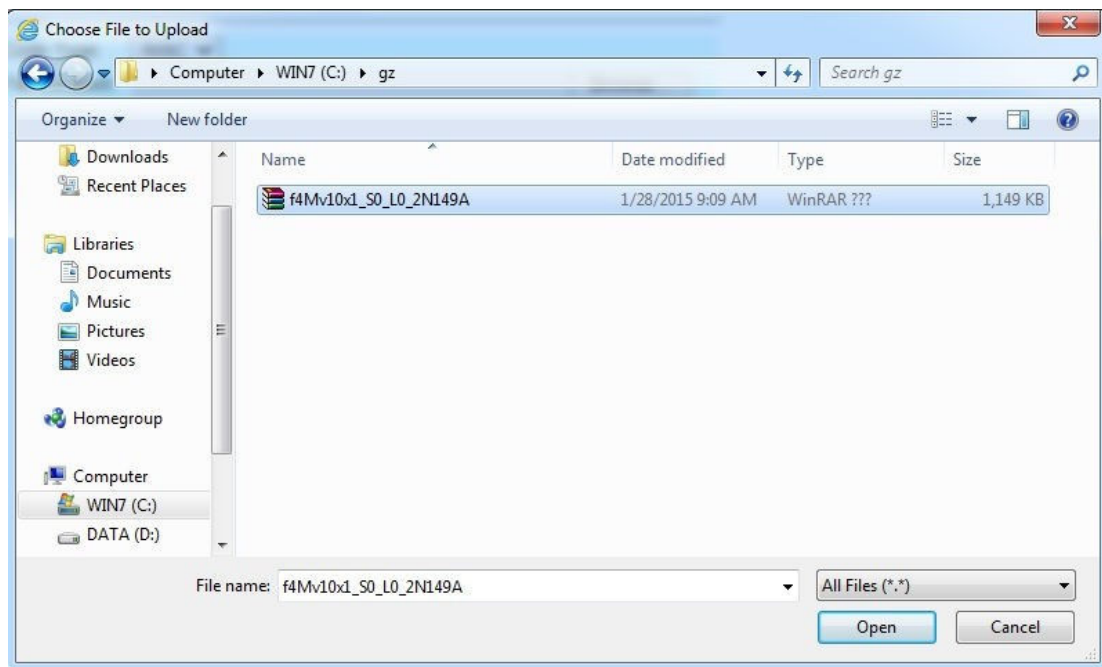

Step 3:[File Location] will show the file location and file name. after confirm ,please click submit

## Update Firmware

Ver = v1.130, GZ = r4IPA,x1, PCB = IS640.

Code Type:	<input type="text" value="RISC"/>
File Location:	<input type="text" value="C:\gz\f4Mv10x1_S0_L0_2N149A.gz"/> <input type="button" value="Browse..."/>
<input type="button" value="Submit"/> <input type="button" value="Reset"/>	

Step 4: please don't turn power off when system updating. It is important. The updating time is about 3 minutes.

## Note Information

### Waiting Message

waiting for system updating & rebooting...

Step 5: After finished update firmware, please click Refresh (F5), then you can set other settings

## 8.2 Default Setting

In this page: Update/ Default Settings, you could restore the factory default settings to the system. **All setting will restore default setting.**

IP will retain original IP as usual not default IP.



Step1: choose Update@Default Setting. When you want to restore default setting, please click [Restore]. You can clear all settings and auto refresh as follows.

## Restore Default Settings

Restore default settings:

Setep 2: please wait for a moment while rebooting as follws.

## Note Information

### Booting

Please wait for a moment while rebooting ...

Setep 3: After reboot, webpage will be back to main page. Please click refresh(F5) ,then you can set other settings

# 9. System Authority



The screenshot shows the PORTech web interface. On the left, a vertical menu contains buttons for 'Network', 'SIP Settings', 'STUN Setting', 'Update', 'System Authority' (highlighted with a red border), 'Save Change', and 'Reboot'. The main content area is titled 'System Authority' and contains three input fields: 'New username:', 'New password:', and 'Confirmed password:'. Below these fields are 'Submit' and 'Reset' buttons.

In System Authority you can change your login name and password.

When you finished the setting, please click the Submit button and “Save Charge”.

# 10. Save Change

In Save Change you can save the changes you have done. If you want to use new setting in the VoIP system, you have to click the Save button. After you click the Save button, the system will automatically restart and the new setting will effect.




The screenshot shows the PORTech web interface. On the left, a vertical menu contains buttons for 'Network', 'SIP Settings', 'STUN Setting', 'Update', 'System Authority', 'Save Change' (highlighted with a red border), and 'Reboot'. The main content area is titled 'Save Changes' and contains a 'Save Changes:' label followed by a 'Save' button.



# 11.Reboot

Reboot function you can restart the system. If you want to restart the system, you can just click the Reboot button, then the system will automatically.

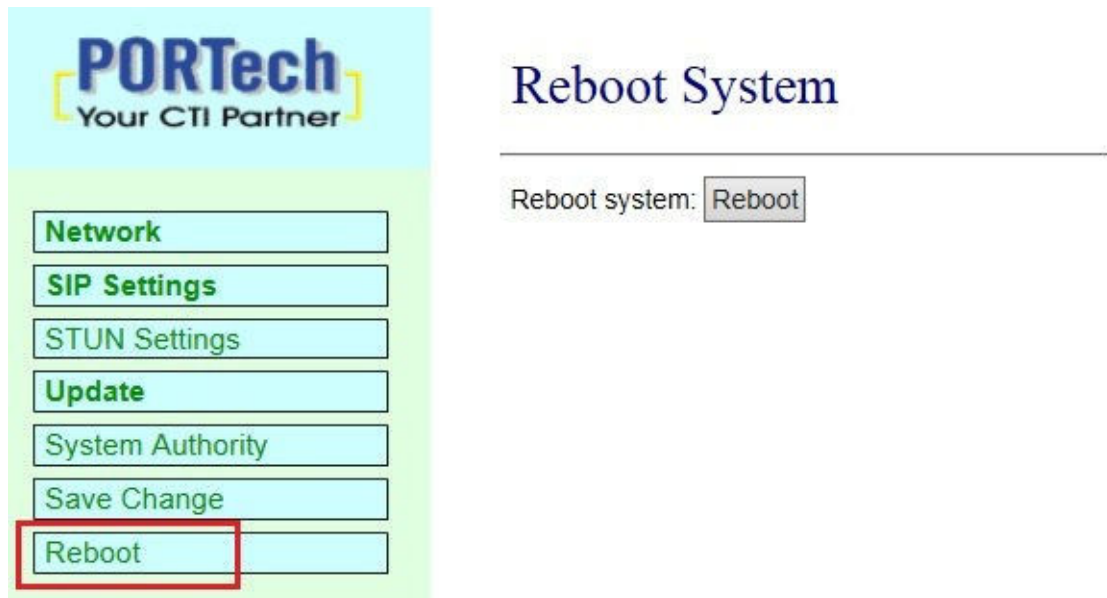

Please don't turn power off while rebooting,thanks

## Note Information

### Booting

Please wait for a moment while rebooting ...

After reboot, webpage will be back to main page. Please click refresh(F5) ,then you can set other settings